


# SIEMENS

Be inspired



**Operating instructions**

and safety precautions 

## Brief overview of the handset

### Status LED (li.-em. diode)

lights up during a call;  
flashes at:  
- incoming call  
- new messages  
- alarm call

### Talk key

- answer a call  
- dial a telephone number

### Directory key

Open the directory

### Key 1

Hold down to select the answering machine/the mailbox

### Asterisk key

Hold down to activate/deactivate the ringer

### Recall key

- Pause (hold key down!)  
- R key function (flash)

Microphone

### Charg. status

### Display (display field)

### Current display and display keys

see below!

### End call key and On/Off key

- end the call  
- cancel function  
- one menu level back (press briefly)  
- Return to idle state (hold down)  
- when the telephone is idle on/off (hold down!)

### Pound key

Hold down to activate/deactivate keypad protection

### Sel Services key

Open the network access list

## Display and display keys

### Time

### Internal telephone number

### Asterisk

The asterisk indicates that the alarm clock is set.

### Charging status

 
 
☐ battery empty  
☐ battery fully charged  
flashes: when empty

### Display keys:

Press the corresponding keys to initiate the function shown in the display




## Display symbols

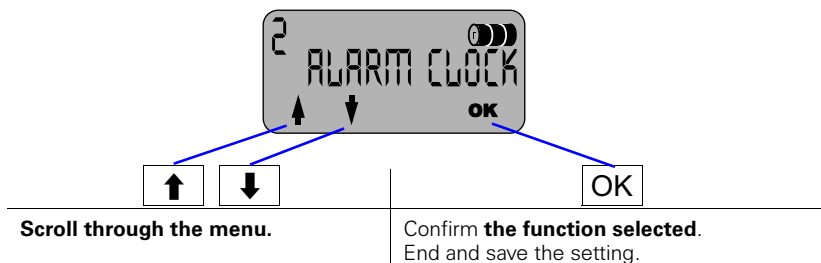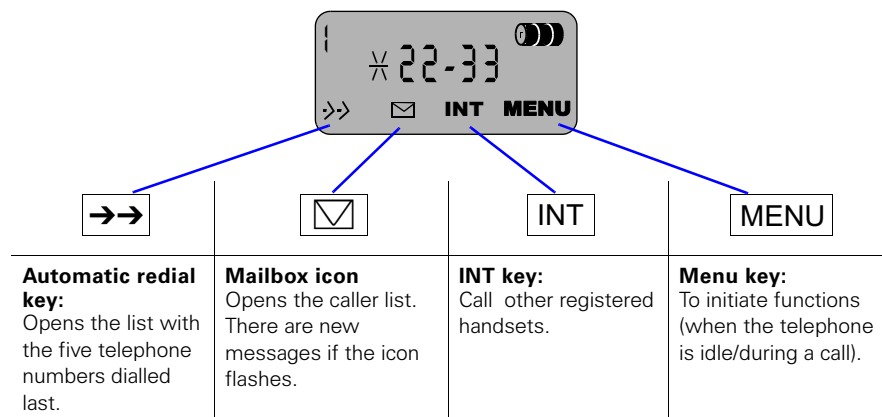

**Then:**

**Press** **briefly:** 1 menu level up  
**hold down** : Return to the idle state

 **No input:** Automatically to the idle state

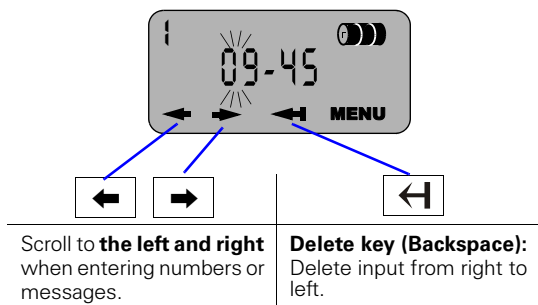

# Contents

Brief overview of the handset .....	1
Display and display keys .....	1
Display symbols .....	2
<b>Safety precautions .....</b>	<b>6</b>
<b>Preparing the telephone .....</b>	<b>7</b>
Installing the base station .....	7
Operating the handset .....	9
Attaching the belt clip .....	10
Activating/deactivating handset .....	10
Activating/deactivating keypad protection .....	10
<b>Date and time .....</b>	<b>11</b>
Setting the date and the time .....	11
Setting the alarm clock .....	12
<b>Making calls .....</b>	<b>14</b>
Making an external call .....	14
Internal dialling .....	14
Answering a call .....	15
Displaying telephone numbers (CLIP) .....	15
Listening in at the base station ("Speaker On/Off") .....	16
Muting the microphone .....	16
Picking up a call from the answering machine .....	16
Mailbox .....	17
<b>Enhanced telephone features .....</b>	<b>18</b>
Automatic redial .....	18
Directory and network access list .....	19
Character map .....	20
Caller list .....	23
<b>Mailbox features .....</b>	<b>26</b>
Functions before a call .....	26
Functions during a call .....	28
Callback when busy .....	29

**For further information please refer to the index – page 75!**

<b>Making cost-effective calls</b>	<b>30</b>
Network access list (call-by-call)	30
Automatic preselection	32
<b>Operating the AM</b>	<b>35</b>
Activating/deactivating the AM	35
Announcement of the remaining memory	36
Recording your own announcement	36
Listening to announcements	37
Deleting messages	38
Picking up a call from the answering machine	38
Setting the answering machine for speed dialling	39
Remote operation	39
<b>Individual answering machine settings</b>	<b>41</b>
Set the number of rings	41
Message length and recording quality	42
Listening in	42
Activating/deactivating the loudspeaker for the answering machine	42
<b>Registering and de-registering handsets</b>	<b>43</b>
Automatic registration	43
Manual registration	44
De-registering handsets	45
<b>Operating several handsets</b>	<b>46</b>
Changing the name of a handset	46
Changing a handset's internal number	47
Making internal calls	47
Connecting a call	48
Internal enquiry calls	49
Accepting or rejecting a waiting call	49
Joining in a call ("barging in")	50
Deactivating the ringer	51
<b>Individual handset settings</b>	<b>52</b>
Changing a handset's display language	52
Modifying the volume and changing the melody	53
Activating/ deactivating Auto talk	54
Resetting a handset to the factory setting	54

Base station settings .....	55
Changing the system PIN .....	55
Modifying volume and melody .....	56
Repeater support .....	57
Resetting the base station to the factory setting .....	58
Connecting the base station to a PABX .....	59
Dialling mode and flash time .....	59
Switching temporarily to tone dialling .....	60
Setting pauses .....	60
Appendix .....	61
Maintenance .....	61
Contact with liquid .....	61
Questions and answers .....	61
Guarantee .....	63
Customer Care .....	65
Technical data .....	67
Menu table .....	69
Quick reference guide .....	72
Accessories .....	73
Index .....	75
Answering machine remote operation	

Dear customer,

Your opinion is important to us!

Please take a little time to fill in a questionnaire on the Internet:

**<http://www.siemens.com/sustomersurvey>**

Participants take part in a draw for Siemens products worth a total of 5000 Euro.

Closing date is 31st August 2002.

Thank you for entering!

# Congratulations



on your Siemens Gigaset!

The following pages describe how your telephone works, so that you will be able to use it easily (see also page 61).

## Safety precautions



**Only use the power supply unit supplied.**



Only use **approved rechargeable batteries of the same type**.  
Never use ordinary (non-rechargeable) batteries. Otherwise health risks and personal injuries cannot be excluded.



Insert rechargeable batteries in accordance with polarity symbols (the instructions are found in the handset battery compartment).



Use the batteries indicated in these operating instructions (the instructions are found in the handset's battery compartment).



Medical equipment can be affected by the use of the telephone. Observe the conditions in your environment (e.g. doctor's practice).



The handset can cause an unpleasant humming sound in hearing aids.



Do not install the base station in bathrooms or showers. The handset is not splashproof (see also page 61).



Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).



Ensure that the operating instructions are included when passing on your Gigaset to a third party.



Dispose of batteries and telephone in an environmentally friendly manner.



Not all functions described in these operating instructions are available in all countries.

---

## Preparing the telephone

 


The package contains the following:

- one base station,
- one Gigaset 4000 Classic handset,
- one power supply unit,
- one telephone cord,
- one belt clip for the handset,
- two batteries,
- one set of operating instructions.

## Installing the base station

### Notes on the installation



45° C

5° C

The base station is designed for operation in protected rooms with a temperature range from +5 °C to +45 °C. Install the base station in a central location in the flat/house e. g. in the hall.



- Never place your Gigaset in or around any of the following: heat sources, direct sunlight, other electrical equipment.
- Protect your Gigaset against moisture, dust, corrosive liquids and vapours.

### Range

The base station range is approx. 300 m outdoors and up to 50 m indoors.



## Connecting the base station

for the analogue network:

 
Power supply unit  
(220/230 V with  
mains cable)

Telephone jack with telephone cord  
(type varies depending on country!)

1


- Insert **the small plug on the mains cable** into the jack,
- place cord in cable duct,
- insert power supply unit into mains socket.

Key to register  
additional hand-  
sets

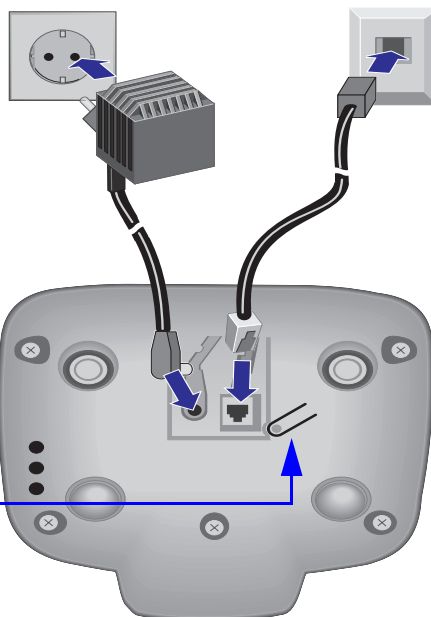

2

 - Insert **small coloured plug on the telephone cord** into the jack (clicks into place),
- place cord in cable duct,
- insert telephone jack into telephone socket.

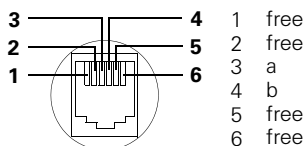

- **Only** use **the power supply unit supplied** as indicated on the underside of the device.
- If you buy another cord, ensure that it has 3-4 assignment (terminal assignment).



Exercise caution when using a new telephone cord. Only use the cord provided.


## Operating the handset

 The display is protected by a plastic film.

**Remove the protective plastic film!**




## Inserting the batteries

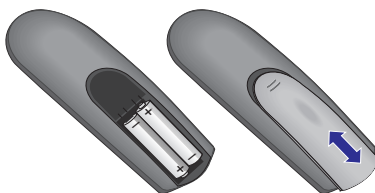

- Insert the batteries **ensuring correct polarity** – see figure on left.
- Replace cover and push gently **upward** until it clicks into place.
- **To open**, press the grooved area on the cover and slide **back**.



 - Only insert the recommended rechargeable **batteries** (see page 67). Never use ordinary (non-rechargeable) batteries or health risks and personal injuries cannot be excluded.
- Never use non-Siemens charging units as these can damage the batteries.



## Placing the handset into the base station and charging the batteries

Before activating your handset, place it in the base station with the display facing upward. After approx. one minute the handsets' internal number is displayed in the upper left corner (e.g. "1").



For information on how to register **further handsets** (bought additionally), see page 43.



Leave the handset for approx. five hours in the base station to charge the batteries. The charging status icon flashes on the handset indicating that the batteries are being charged:



Batt. empty (symbol flashes)



Batteries  $\frac{1}{3}$  charged



Batt.  $\frac{2}{3}$  charged



Batt. fully charged

 
### Note:

Your Gigaset is now ready for operation. Your answering machine is set with a standard announcement. Please set date and the time (see page 11), so that the time of incoming calls can be noted correctly.



- Once the initial charging operation is completed you can replace your handset into the base station after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
  - The batteries heat up during charging. This is normal and not dangerous.
  - The battery charging status is correctly displayed only after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.
- 

### Attaching the belt clip

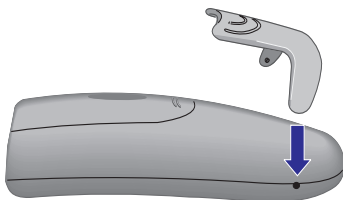

Push the belt clip onto the back of the handset until the side protrusions click into place.

### Activating/deactivating handset



To activate/deactivate, **hold down** the end call key – You will hear the confirmation beep\*.



The handset is activated as soon as you insert the batteries and place the handset in the base station.

---

### Activating/deactivating keypad protection

You can disable the handset keys when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation.

If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.

Accepting a call: Press the talk key



To activate/deactivate, **hold down** key – you will hear the confirmation beep\*.

---

\* Confirmation beep = rising tone sequence,  
Error beep = falling tone sequence.

Press keys:



## Date and time

Your Gigaset has an alarm clock function to help you keep track of your schedule.

### Setting the date and the time

The date and time setting is necessary in order for the date and time of the arrival of messages/incoming calls to be displayed correctly.

You can also set the clock mode, i.e. 12 h mode ([AM] and [PM]) or 24 h mode.

#### Date

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.  
The current setting is displayed in the DD-MM-YY mode.

e. g. 2<sup>ABC</sup> 0+ 0+ 5<sup>JKL</sup> 0+ 1<sup>MO</sup>

Enter the day/month/year (e.g. 20.05.2001 as shown).

If necessary, jump to a digit, for example to correct it.

Save the setting.

#### Time

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

e. g. 1<sup>MO</sup> 9<sup>WXYZ</sup> 0+ 5<sup>JKL</sup>

Enter the hours/minutes e.g. 19.05 h as shown.

If necessary, jump to a digit, for example to correct it.

Save the setting.

If 12 h mode is set as [CLOCK MODE] :

Confirm first half of the day.

Select second half of the day and confirm.

Save the setting.

Press keys:

MENU

↓ BASE SET OK

↓ DATE/TIME OK

↓ CLOCK MODE OK

24 H OK

or

↓ 12 H OK

## Display mode (12 or 24 hours)

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm 24 h mode.

Select 12 h mode and confirm.

## Setting the alarm clock

You can use your handset like an alarm clock. This requires the prior setting of the time.

**The date and time must already be set** (see page 11).

## Activating the alarm clock

The active alarm clock rings every day at the set time.

Open the menu.

Select the menu item and confirm.

e. g. 0+ 7 PDS 1 OLD 5 JKL

Enter the time for the alarm call (hours/minutes)  
e.g. 7.15 h as shown.

 
← →

If necessary, jump to a digit, e. g. to correct it.

OK

Save the setting and terminate the function.

The asterisk  
indicates that the  
alarm clock is set.

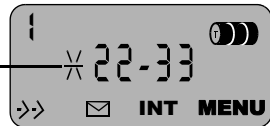

Press keys:

MENU



ALARM CLOCK

OK

## Deactivating the alarm clock

The alarm clock is set, but you do not want the alarm to sound.

Open the menu.

Select the menu item and confirm.

The alarm call is deactivated. The asterisk before the time display is no longer shown.

## Turning off the alarm call

An alarm clock rings and the status LED flashes (approx. 30 s). Press any key to turn off the alarm call.

Press keys:

## Making calls

### Making an external call

External calls are calls into the public telephone network.



Dial the telephone number, if necessary use the display key to correct single digits.



Press the talk key.



To end the call, press the end call key.



- You can also press the talk key **first** and then enter the telephone number – each digit is dialled immediately.
- You can cancel the dialling operation with the end call key .
- You can insert a pause with the recall key (hold key down), e.g. for international calls.

### Internal dialling

Internal calls are calls to other registered handsets. Internal calls are free of charge (e.g. to call within your home from the kitchen to the living room).

INT e. g.

or

INT

Press.



Select the desired user and press the talk key.

INT



#### Call all handsets:

All handsets are called.

#### Ending a call:



Press the end call key to end the call.

Press keys:

or



## Answering a call


Your telephone rings (ringer) and the status LED flashes.



Press the talk key

Simply remove the handset from the base station (factory setting: Auto talk, see page 54).



 
- If the **ringer is disturbing you**: Open the menu via **MENU** and select **SILENT**.
- As long as the call is displayed, you can accept it by pressing the talk key  for example.
- Setting the handset volume (while you are talking, see page 53).

## Displaying telephone numbers (CLIP)

The network provider must support the calling line identification (CLIP) and the telephone number must have been transmitted. Contact your network provider.

An incoming call is displayed as follows (example):

Telephone number

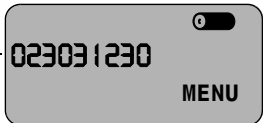

If the number received is saved in the handset directory, the stored name is displayed (example: **ANNE**).

If the telephone number or the name is not displayed, you see:

**<< >>**

**UNAVAILABLE**

If you have not requested **CLIP**

If the caller has not requested the telephone number transmission or if display of the number was deliberately suppressed by the caller (**CLIR**)

<b>CLIP</b>	<b>C</b> alling <b>L</b> ine <b>I</b> dentification <b>P</b> resentation = Displaying the caller's telephone number
<b>CLIR</b>	<b>C</b> alling <b>L</b> ine <b>I</b> dentification <b>R</b> estriction = Display of the incoming telephone number suppressed.



Press keys:



BASE SPKR

MENU

OK

### Listening in at the base station ("Speaker On/Off")

You can switch on the base station loudspeaker, so that other people in the room can hear what your external caller on the telephone is saying.

Open the menu.

Select the menu item and confirm.

To deactivate, repeat this procedure.



Before you activate this function, you should inform your caller about your intention.

### Muting the microphone

You can deactivate your microphone during external calls in order to talk confidentially to another person in the room, for example. The external caller cannot hear your conversation during this time. You do not hear your caller either.

INT

Mute the microphone – the call is placed on hold and the external caller will hear music.

Re-activating the microphone:

MENU

Open the menu.

GO BACK

OK

Confirm.

You return to the external caller.

### Picking up a call from the answering machine

While the answering machine is recording a message (◻◻ symbol is flashing), you can still answer the call if you want to talk to the caller.



Press the talk key.

The recording stops and you can talk to the caller.

Press keys:

## Mailbox

### Storing the mailbox for fast access

You can use the mailbox for fast access.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the telephone number of the mailbox and confirm.



Once you have selected the mailbox, simply hold down the **(123)** key on the handset. You are directly connected to the mailbox (fast access).

### Checking the mailbox

#### Prerequisite:

You have entered the number of the mailbox.

Display flashes.

Select the menu item and confirm.

**MENU**

↓	VOICE MAIL	OK
↓	SET KEY 1	OK
	MAILBOX	OK



↓	MAILBOX	OK
---	---------	----

Press keys:

## Enhanced telephone features

In addition to standard telephoning, your Gigaset offers a number of other fast, convenient features.



### Automatic redial

Your handset automatically saves the five telephone numbers dialled last or names.



Display the telephone number/name.



Select the required telephone number/name.



Press the talk key – the telephone number is dialled.

### Delete the redialling list



Open the redialling list.

MENU

Open the menu.

6 MNO

DELETE?

OK

Press digit 6 and confirm the prompt.



Display the telephone number.



MENU

Select a telephone number and open the menu.



COPY TO DIR

OK

Select the menu item and confirm.



OK

If necessary, change the telephone number and confirm.



If necessary enter the name.


Input of letters and characters (see page 20).


OK

Confirm input.

Press keys:

## Directory and network access list

With the **directory**  you can store up to 20 telephone numbers and then dial them at the push of a button.

In order to make calls cost-effectively you can save the prefixes (Call-by-Call) of telephone companies in the **network access list** .

### Storing an entry



MENU



NEW ENTRY

OK



OK



OK

Open the directory/network access list.

Open the menu.

Select the menu item and confirm.

Enter the **telephone number**.

Confirm input.

Enter **the name**.

For information on entering letters and characters (max. 12) see the character map (s. page 20).

Confirm input.




 
 
 
 

 
 
 
 
 

Max. number of numbers:

Directory 22 digits

Network access list 12 digits




Press keys:

## Character map

 	1 x	2 x	3 x	4 x	5 x	6 x
	Blank	1				
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8		
	W	X	Y	Z	9	
	+	0	-		?	_
	*	/	(	)	,	
	#					

Press the relevant key repeatedly or hold it down:



Controlling the cursor with  . Deleting a character with . Characters are always inserted to the left of the cursor.

The entries are sorted in the **following sequence:**

1. Blank
2. Digits (0 to 9)
3. Letters (alphabetical)
4. Remaining characters

To avoid the alphabetical sequence of the entries in the directory, enter a blank before the name. This entry then goes to the first position (example: entering " Karla").



Press keys:

e. g.  



## Dialling a number from the directory


Open the directory.

Enter the first letter of the name (e.g. for the name Emma - first letter "E"): Press the  key twice and scroll with the  key. The names are listed in alphabetical order.



Press the talk key. The telephone number is dialled.



After selecting the number, you can also open the menu, select **EDIT ENTRY**, extend/change the number and dial with the talk key .

## Dialling with the network access list

You can use this function to put a network provider's prefix in front of the telephone number (linking).



Open the network access list.



**MENU**

Select Call-by-Call number and open menu.

**EDIT ENTRY**

**OK**

Confirm entry.



Enter the number for "linking"

**or**



**OK**

Select the telephone number for "linking" and confirm.



Press

## Displaying and changing a directory entry



Open the directory.

e. g.  

Enter the first letter of the name.

**MENU**

Open the menu.



**SHOW ENTRY**

**OK**

Select the menu item and confirm. The number is displayed.



If necessary, change telephone number.

For information on entering letters and characters, see page 20.

**OK**

Confirm input.



Overwrite the name.

**OK**

Confirm input.

Press keys:



MENU



SHOW ENTRY

OK



OK



OK



e. g.

3 DEF

3 DEF

MENU



DELETE

OK



MENU



DELETE

OK



MENU

6 MND

DELETE?

OK

## Displaying and changing the network provider entry

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm. The number is displayed.

Overwrite number if necessary.

For information on entering letters and characters, see page 20.

Confirm input.

Overwrite the name.

Confirm input.

## Deleting a single entry from the directory

Open the directory.

Enter the first letter of the name.

Open the menu.

Select the menu item and confirm.

## Deleting a single entry from the network access list

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm.

## Deleting all numbers in the directory

Open the directory/network access list.

Open the menu.

Press digit 6 and confirm the prompt.

Press keys:


## Caller list

The numbers of the last 30 calls are saved in the caller list.

**Prerequisite:** The incoming call number has been transmitted (CLIP).

If several calls are received under the same number, the last call is saved.


### Activate the caller list

If there are new calls,  in the display and the status LED flash.



Press the display key of the flashing icon.



Even if there are no new entries, you can open the caller list by pressing .



Open the caller list.

If the status LED does not flash, no new calls or messages have been saved.



CALLS 02/06

Select caller list.

The display in the example means:

**Calls**

symbolizes caller list.

**02**

symbolizes 2 new calls.

**06**

symbolizes 6 old calls.

OK

The number received last is displayed.



Scroll to the next or previous entry. One list entry is displayed.



You can delete a phone number from the list via **MENU** and **DELETE**.



or

Terminate the function.

### Call back a caller



Calling back a caller.

The entry is copied to the redialling list.



### Press keys:

☑  
↓ CALLS 02/06 OK

↓ MENU

↓ COPY TO DIR OK

OK



OK

☑  
↓ CALLS 02/06 OK

MENU

↓ LIST MODE OK

MISSED OK

or

↓ ALL OK

☑  
↓ CALLS 02/06 OK

MENU

↓ DELETE LIST OK

## Copying telephone number to the directory

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Confirm. Extend the number if necessary.

Confirm input.

Enter the name.

For information on entering letters and characters, see page 20.

Confirm input.



You can also store a telephone number during a call via **MENU** and **COPY TO DIR** ("notebook function").

## Caller list settings

Optionally you can choose to save:

- only the **missed calls**
- **all incoming calls.**

☑ Open caller list.

Select the menu item and confirm.

Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.

## Deleting the caller list

☑ Open the caller list.

Select the menu item and confirm.

Open the menu.

Confirm.

Press keys:

☒  
 ↓ CALLS 02/06 OK  
                     ↓ MENU  
 ↓ TIME OK

## Finding out the date and time of a call

In the caller list you can also display the time the call was received.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Select the menu item and confirm.

The display shows for example:

23/12 11-56

In the example, the call was received on the 23.12. at 11.56 h.

If the time is set to the 12 h mode, an **A** behind the time indicates the first half of the day and a **P** indicates the second half of the day.

## Finding out the status of a call

In the caller list you can also display whether an entry is new or older whether the call was answered. In the answering machine list you can also display whether there is a message belonging to the call.

☒  
 ↓ CALLS 02/06 OK  
                     ↓ MENU  
 ↓ STATUS OK

Open the caller list.

Select the menu item and confirm.

Select the required entry and open the menu.

Select the menu item and confirm.

The display shows the following examples:

NEW 02/04

The second of four new calls.

OLD 01/03

The first of three old calls.

ANSWERED

The call has been answered (LIST MODE ALL).

AM ANSWER

The answering machine has answered the call (LIST MODE ALL).

NEW MBX MSG

There is a new message from the network provider in the list.

OLD MBX MSG

The message from the network provider has already been read.

Press keys:

## Mailbox features

Your handset helps you use the mailbox features. Functions are activated via the menu before a call (when the telephone is idle) and during a call. Your network provider will be happy to answer any questions, as the network functions may vary.

### Functions before a call

You can set these functions before the call:

- Suppress telephone number for one outgoing call
- Activate/deactivate call waiting
- Deactivate callback
- Set call divert.

### Suppress telephone number for the next call (CLIR)

Your number appears on the display of the person you called (if this is released by your network provider). If you want to withhold your number, you can suppress the display for the next outgoing call.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required telephone number.

Confirm.

The telephone number is suppressed for this call.

### Activating/deactivating call waiting

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

or

Select the menu item and confirm.

Press after confirmation from the telephone network.

MENU



SEL SERVICES

OK

WITHHOLD NO

OK



OK

MENU



SEL SERVICES

OK



CALL WAITING

OK

ON

OK



OFF

OK



Press keys:

MENU

↓ SEL SERVICES OK

↓ CALL DIVERT OK

AUTOMATIC OK

or

↓ NO ANSWER OK

or

↓ IF BUSY OK

ON OK

 OK

or

↓ OFF OK

## Call forward

Incoming calls are diverted to another telephone number. You can define the following conditions:

- Immediately
- When the call is not answered\*
- When the number is busy\*.

You want to divert all calls to another number permanently.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Set to automatically divert all incoming calls. Calls are no longer signalled.

Set to divert incoming calls if nobody answers after several ring cycles.


Set to divert incoming calls when your line is busy.

Then activate or deactivate:

Activate call divert.

Enter the telephone number to which incoming calls should be diverted.

Deactivate call divert.

After confirmation from the telephone network, press the end call key .

\* not available in Ireland

Press keys:

### Functions during a call

You can set the following functions during a call:

- Enquiry call, toggling, initiating/ending a conference\*,
- Accepting/rejecting a waiting call.

### Enquiry calls, toggling, conference

Enquiry call: You are conducting an external call and want to call a second external user. The first user waits in the meantime.

MENU

Open the menu.

EXTN CALL

OK

Confirm.



Enter the second user's telephone number. The telephone number is dialled.



For dialling the second user, you can also use the directory (📖 key, see page 19) or the caller list (📧 icon, see page 23)!

MENU

Open the menu.



END CALL

OK

End the second call. You are re-connected to the waiting caller.

or



Toggling: Toggling between two callers.

or

MENU

Open the menu.

CONFERENCE

OK

Conference: You and two external users can simultaneously listen and talk.



Press. The call is ended and all users are disconnected.

\* not available in UK

Press keys:

MENU  
ACCEPT OK

## Call waiting during a call

You are conducting an external call and hear a call waiting tone that signals an additional external call.

The incoming number is displayed if it has been transmitted (CLIP).

Open the menu.

Accept the waiting call.

## Callback when busy

### Activate callback

When the line of the called user is busy, you can initiate a callback. When the called user is available, a callback is made automatically (this is shown in the display). The user is called only after you have accepted the callback.



Please note that for the selection **MENU** **RINGBACK** the call duration must first be shown in the display (it appears after 2-3 sec) .

MENU  
↓ SEL SERVICES OK  
↓ RINGBACK OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

After confirmation from the telephone network, press the end call key .

### Deactivating callback

You have decided not to receive a callback.

MENU  
↓ SEL SERVICES OK  
↓ RINGBACK OFF OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

After confirmation from the telephone network press the end call key .

Press keys:



## Making cost-effective calls

To save money you should use the services of the cheapest network providers. You are provided with prefixes that you dial before the actual telephone number (call-by-call). This gives you convenient access to low-cost telephone tariffs.

### Network access list (call-by-call)

You can save the numbers of telephone companies (call-by-call) in the network access list (☎) (page 19). Before dialling the telephone number, you can conveniently choose the stored Call-by-Call number.

### Dialling with the network access list

You can use this function to put a network provider prefix in front of the telephone number (linking).



Activating the network access list.



MENU

Select Call-by-Call number and open menu.

EDIT ENTRY

OK

Confirm entry.



Enter the number for "linking"

or



OK

Choose number for "linking" and confirm.



 
Press.



### Enter, change, delete a network provider:

You can manage entries in the network access list in the same way as entries in the directory. Instead of using the phonebook key (☎), call up the network access list with (☎) and press **MENU**. Then select the required function (see page 21 and see page 23).

Press keys:

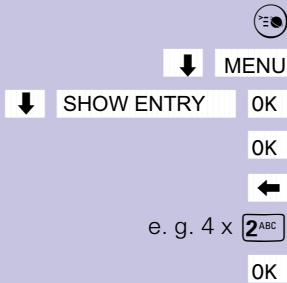

## Storing the network provider prefix (call-by-call) for speed dialling

You can store eight numbers (2 – 9) for speed dialling from the network access list. To do so, you must enter the digit for the speed dialling **before** the network provider's name.

Example: **2** and now the network provider's name.

Activate the network access list.

Choose the network provider and open the menu.

Select the menu item and confirm.

Confirm the telephone number.

Move the cursor to the first position of the name.

Enter the speed dial key **2**.

Save the change.



Store a new entry and enter the speed dial number as the first character of the network provider's name.

## To use speed dialling:

z. B. **2**

Hold **down** key: The stored network provider number is displayed.

e. g.

Enter the number for "linking"

**or**



OK

Select entry in the directory and confirm.



Press.



Press keys:

## Automatic preselection

You can store the number of a frequently used network provider (call-by-call). It is automatically put in front of the telephone number dialled ("linking").

You must therefore define lists of telephone numbers to be dialled "**with preselection**" and "**without preselection**".

### List with preselection

In this list telephone numbers to be used **with** automatic preselection are stored.

**Example:**

You enter a "**0**" in this list. Whenever you dial a telephone number that begins with "**0**", the stored network provider prefix is used automatically.

### List without preselection

In this list telephone numbers **not** to be used with automatic preselection are stored.

**Example:**

You enter a "**00**" in this list. Whenever a telephone number that begins with "**00**" is dialled, **automatic** preselection is **not** used .



For information on manual "linking" of a network provider prefix (call-by-call) and a telephone number, see page 30.



## Step 1: Storing the network provider prefix

You must first store the prefix of a frequently used network provider (preselection).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Enter or change the network provider prefix.

Confirm input. Automatic preselection is active.

MENU



BASE SET

OK



PRESELECT

OK

PRESELECT NO

OK



OK

Press keys:



## Step 2: Saving/changing entries in the preselection lists

Both lists can contain:

Five entries	with up to six digits
Six entries	with up to two digits

Empty entries contain dashes.

### List “with preselection”

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

If necessary select the required entry.

Open the menu.

Enter the telephone number, for example enter **0+** **8<sup>TUV</sup>** and confirm.

### List “without preselection”

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

If necessary the select required entry.

Open the menu.

Enter the telephone number, for example enter **0+** **0+** and confirm.

MENU

↓ BASE SET OK

↓ PRESELECT OK

↓ WITH PRESEL OK

↓ ↑

MENU

OK

MENU

↓ BASE SET OK

↓ PRESELECT OK

↓ W/O PRESEL OK

↓ ↑

MENU

OK

### Press keys:

#### Dialling with automatic preselection

When dialling with automatic preselection, the prefixes entered are checked.



Enter the telephone number.



Press the talk key.

**The first** digits of the dialled telephone number are checked against the list “with preselection” . If these match, the stored network provider prefix is automatically put in front.

#### Dialling without automatic preselection

When dialling without automatic preselection, the prefixes entered are checked.



Enter the telephone number.



Press the talk key.

**The first** digits of the dialled telephone number are checked against the list “without preselection” . If these match, the stored network provider prefix is **not** put in front.

Press keys:

## Operating the AM



It's hard to imagine life without an answering machine to record every incoming call during your absence. It is operated via the handset and is ready for operation immediately after your base station is activated.

The answering machine operation is supported by appropriate handset displays and by announcements that you hear on the handset.

As long as you have not set the date and time (see page 11), recorded messages do not receive a "time stamp".

In addition to the telephone's own answering machine, you can select an answering machine from your network provider (e.g. the **mailbox**). **None** of the following functions relates to the network answering machine. Check with your network provider for these.

## Activating/deactivating the AM

Your answering machine is activated and ready for operation once your base station has been put into service. For recording messages with a time stamp, the date and time must be set (see page 11). The answering machine uses the standard announcement stored until you record your own announcement.

MENU



VOICE MAIL

OK



ANS MACHINE

OK

OK

Open the menu.

Select the menu item and confirm.

The answering machine is now activated (marked with ✓) and ready to record.

To deactivate, confirm the marked function again.



If the answering machine's memory is full, the answering machine switches itself off. Delete old messages (see page 38).

Press keys:

MENU  
↓ VOICE MAIL OK  
↓ ANNOUNCEMENT OK  
REC ANC OK

OK

or



## Announcement of the remaining memory

Whenever you switch the answering machine on or off you will automatically be notified of the remaining memory on the handset.

## Recording your own announcement

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear a notification of the recording and then the ready tone (short beep).

Record your announcement.

Example of a **typical announcement**:

*„ I cannot take your call right now. Please leave a message after the tone. “*

Terminating a recording.

The recorded announcement is repeated for checking.

The recording is deleted.

The standard announcement is active again.



Recording is automatically terminated:

- If you exceed the maximum recording time of 170 s
- If you pause for more than two seconds when recording your announcement

Press keys:

MENU

↓ VOICE MAIL OK

↓ ANNOUNCEMENT OK

↓ PLAY ANC OK

or

↓ DEL ANC OK

SURE? OK

## Checking an announcement or deleting it

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.


Select the menu item and confirm.

Select the menu item and confirm.

Confirm prompt.

The standard announcement is active again.

## Listening to announcements

The status LED and the mailbox icon  in the display flash to indicate that there are new messages or calls.

Press the display key of the flashing icon.

If there are no new messages or calls, you can listen to old messages:

Press the display key.

Select the menu item and confirm.

The display in the example means:

**ANS M**      answering machine.

**01**          three new messages.

**02**          four old messages.

The playback begins immediately with the first new message. After the last new message, the old messages are played back. After the last message, you hear the end tone.



No more messages can be recorded if **AM MEM FULL** is displayed.

## Pause during the playback



Pause.



Press once more to continue.



If playback is interrupted (pause) for more than a minute, the answering machine reverts to idle status.

### Press keys:



### Jump forward and back while playing back messages

To the start of the current message.

2 x



To the previous message.



To the next message.

2 x



Skip ahead one message after next.

### Deleting messages

You can delete either individual messages or all old messages.

#### Deleting individual messages

While playing back the message to be deleted:



Press the display key.

#### Deleting all old messages

During playback or a pause:

MENU

Open the menu.



DELETE OLD

OK

Select the menu item and confirm.

SURE?

OK

Confirm.

### Picking up a call from the answering machine

While the answering machine is recording a message (⏏ symbol lights up), you can still pick up the call if you want to talk to the caller.



Press the talk key.

The recording is terminated and you can talk to the caller.

Press keys:

MENU  
 ↓ VOICE MAIL OK  
 SET KEY 1 OK  
 MAILBOX OK  
 OK

or

MENU  
 ↓ VOICE MAIL OK  
 SET KEY 1 OK  
 ↓ ANS MACHINE OK

## Setting the answering machine for speed dialling

You can choose between the mailbox and the answering machine (factory setting) of your telephone for fast access.

Open the menu.

Select the menu item and confirm.

Confirm.

Confirm.

Enter the mailbox's telephone number and save the setting.

Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.



The current setting is marked with ✓. Just hold down the **123** key on the handset and you are connected directly to the answering machine (speed dialling).

## Remote operation

You can check your base station's answering machine from any other telephone (e.g. hotel, pay phone).

### Prerequisite:

You can only operate your answering machine remotely if you have **already** changed the factory default system PIN (0000) **at home** (see page 55).



You will find instructions for this in credit card format in the appendix.



### Press keys:



### Initiating remote replay

Dial your own telephone number.  
You will hear your announcement text.

#### **While you are hearing your announcement:**



Press key and enter system PIN. You are informed whether new messages have been recorded.  
You will hear the new messages.

#### **You have the following options:**



Go to the start of the current message.  
Go to the previous messages (press repeatedly).



Pause.  
Continue (press once more).



Go to the next message.  
Go to the following messages (press repeatedly).



Delete the current message.



For remote replay, your telephone must support tone dialling (DTMF). You can hear a tone when you press a key. If not, you must use a tone generator (available in shops).

### Activating the answering machine remotely

If you forgot to activate your answering machine, you can switch it on remotely. Let your telephone ring for approx. 1 minute.

You will hear: "Please enter PIN "



Enter system PIN (must not be 0000!).  
Your answering machine is now activated.

Press keys:

## Individual answering machine settings

The answering machine has already been preset for you at the factory. You can however make individual settings using the handset.

### Set the number of rings

You can set how many times the telephone rings before the answering machine is activated. You can choose between two to nine rings and the **automatic** charge saving function.

With the automatic charge saving function (factory default) the answering machine is activated after:

- 2 rings: there are new messages,
- 4 rings: no new messages have been received.

Since the first ring from an external call is suppressed on the Gigaset, when **accessed remotely** the answering machine is activated after:

- 3 rings: there are new messages,
- 5 rings: no new messages have been received.

When operating remotely you then know that if the telephone rings four times there are no new messages – if you end the call now, no call charges are incurred.

MENU



VOICE MAIL

OK

Open the menu.

Select the menu item and confirm.



RING DELAY

OK

Select the menu item and confirm.



OK

Set the number of rings or the charge saving function and confirm.

Explanation of the display:

AUTO	automatic (least cost function)
2 RINGS	The phone rings twice before the answering machine becomes active.
9 RINGS	The phone rings nine times.

Press keys:

MENU  
 ↓ VOICE MAIL OK  
 ↓ MESSAGE SET OK  
 MSG LENGTH OK  
 ↓ OK  
 or  
 ↓ QUALITY OK  
 ↓ OK

### Message length and recording quality

If you like, you can set a maximum recording time for your answering machine.

On delivery the message length is **120 seconds**, and the recording quality is **LONG PLAY** (recording time at least 15 minutes).

If you select **HIGH QUALITY** for the recording quality, the recording time is reduced to approximately 7 minutes.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select unlimited, 30, 60 or 120 seconds and confirm.

Select the menu item and confirm.

Select standard ("LONG PLAY") or high quality ("HIGH QUALITY") and confirm.

### Listening in

While a message is being recorded you can listen in on the loudspeaker of any handset (factory setting: activated).

Open the menu.

Select the menu item and confirm.

Listening in is activated and marked with ✓.

To deactivate, confirm the marked function again.

### Activating/deactivating the loudspeaker for the answering machine

When the loudspeaker is activated (factory setting), you can also listen to messages and announcements (date, time) when they are played back on the base station.

Open the menu.

 
Select the menu item and confirm.

The loudspeaker is activated and marked with ✓.

To deactivate, confirm the function marked again

MENU  
 ↓ VOICE MAIL OK  
 ↓ SPKR ON/OFF OK  
 OK

Press keys:



## Registering and de-registering handsets

To be able to make calls with your handset, you must "introduce" it to its base station (registering). This is very simple and occurs automatically.

Handsets of the Gigaset 2000/3000 families and non-Siemens handsets must be registered manually.

### Automatic registration

#### Gigaset 4000 handsets at the Gigaset 4010/4015 base station



Automatic registration ("introducing") is only possible for the supplied handset and any other G4000 handsets bought additionally. Before activating your handset, **place it** in the base station **with the display facing upward**. After approx. 1 minute, the handset's internal number is displayed (e.g. " 1 ").

The next unassigned internal number (1–6) is automatically assigned to the handset. If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

It is possible to assign a different internal number (see page 47) or a different internal name (see page 46) to a handset later.

Press keys:

### Manual registration

#### Gigaset 4000 handsets at the Gigaset 4010/4015 base station

If a handset has already been registered at a different base station, you must now register it at your base station. The Gigaset 4000 Classic handset cannot be registered at more than one Gigaset 4010/4015 Classic base station at one time.



MENU

 


REGISTER HS

OK



OK



##### Step 1:

Open the menu.

Select the menu item and confirm, **PIN \*\*\*\*** is displayed.

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

After entering the system PIN, **REGISTER HS** flashes in the display.

##### Step 2:

Hold down the key underneath the base. A signal tone is generated at the base station. The next unassigned internal number (1–6) is automatically assigned to the handset.

If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

After about a minute the internal number of the handset is shown in the left-hand corner of the display (e.g. "2").

Press keys:

## Registering Gigaset 2000/3000 handsets and non-Siemens handsets at the Gigaset 4010/4015 base station

### Prerequisite:

The non-Siemens handsets must also comply with the **GAP standard!**

However, it is possible that not all functions will be available on your handset!

<b>GAP</b>	<b>G</b> eneric <b>A</b> ccess <b>P</b> rofile = European standard for the interaction of handsets and base stations
------------	---



 
### Step 1:

Register your handset according to the operating instructions of the relevant handset.

After registration, your Siemens base station assigns the **first unassigned** internal number to the handset.



### Step 2:



Press the key on the underside of the base station briefly.

A signal tone is generated at the base station.

## De-registering handsets

### Prerequisite:

You can only de-register handsets with a Gigaset 4000.

Press the display key.

INT

Select the handset to be de-registered.



MENU

Open the menu.

↓ DE-REG H/SET OK

Select the menu item and confirm [PIN \*\*\*\*] is displayed.



OK

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

 
DE-REGISTER? OK

Confirm the prompt.

Press keys:



## Operating several handsets

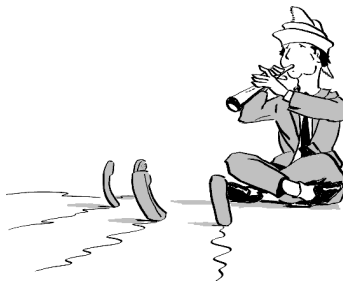

Turn your Gigaset into a small PABX.

You can register and operate up to six handsets at your base station.

## Changing the name of a handset

The names 1, 2 etc. are assigned automatically. However, you can change these names, e.g. to "ANNE," "OFFICE" etc. (10 characters maximum).

INT

Press the display key.



Select the required handset.

MENU

Open the menu.



Select the menu item and confirm.



Enter name (see character map on page 20).

OK

Confirm input.

Press keys:

INT  
MENU  
RE-ASSIGN NO OK  
↓ OK  
e. g. 2<sup>ABC</sup> OK

INT e. g. 2<sup>ABC</sup>  
or INT  
↑ ↓ ☎

INT ☎



## Changing a handset's internal number

You can change the number of a handset.

Press the display key.

Open the menu.

Confirm. All registered handsets are displayed.

Select a handset.

Select a free internal number and confirm.



If the selected internal telephone number has already been assigned to a different handset, you will hear an error beep (descending tone sequence).

## Making internal calls

Internal calls are calls to other registered handsets; they are free of charge.

Enter the handset's internal number.

Press.

Select the desired user and press talk key.

### Calling all handsets:

All handsets are called ("collective call").

### Ending a call:

Press to end the call.



Press keys:

INT

e.g. 2<sup>ABC</sup>



### Connecting a call

You can transfer an external call to another handset.


Press the display key – the external user hears music on hold.

Enter the internal number.

When the internal user answers, announce the external call. Then:

Press the end call key. The call is connected.

 


Instead of announcing the call, you can also immediately press the end call key .

If the internal user does not answer or if his line is busy, the call is automatically returned to you.

Press keys:

INT

e. g. 

MENU

GO BACK

OK

or



MENU

ACCEPT

OK

or



REJECT

OK

## Internal enquiry calls

You are conducting a call with an external user. You can call another internal user and conduct an enquiry call without clearing down the initial connection. You are automatically reconnected to the external user when you end the enquiry call.

Press the display key – the external user hears music on hold.

Enter the internal number of the handset. You are now talking to the second internal user.

### Ending the enquiry call:

Open the menu.

Confirm.

You are reconnected to the external user.

The external call is transferred to the second internal user.

## Accepting or rejecting a waiting call

You hear the call waiting tone (short beep) if you receive an external call while conducting an internal call. This function must be requested from the network provider.

Open the menu.

Confirm. The internal call is **ended**. You are connected to the external caller.

Select the menu item and confirm.

You are still connected to the internal user.

Press keys:

		MENU
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	BARGE IN	OK

### Joining in a call ("barging in")

An internal user conducts an external call. A second internal user can barge in on this call and speak to the other users. This is indicated by a signal tone (not available in all countries!).

### Activating/deactivating this function

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

To deactivate, confirm the function marked with ✓ once more with **OK**.

### Barging in

You see **LINE IN USE** in the display and want to barge in.



Lift the handset. The conference call is signalled by a beep in the active call.

During the call, you see the display

**LISTENING IN**.



Replace the handset to leave the call.



The conference cannot be initiated if open listening ("speaker on") is active for the external call.

---

Press keys:



or

MENU

SILENT

## Deactivating the ringer

All handsets ring when there is an incoming call. You can deactivate the ringer.

Hold down the \* key until the handset does not ring any more.

The ringer is **permanently** deactivated.

To re-activate the ringer, press .

 
Open the menu.

Press.

The ringer is deactivated **for the current call**.

## Paging


Press the base station key briefly – all handsets ring at the same time ("Paging").



### End paging:

Press the base station key very briefly or press the talk key on a handset.

 
**(not available in all countries!)**



Press keys:



## Individual handset settings

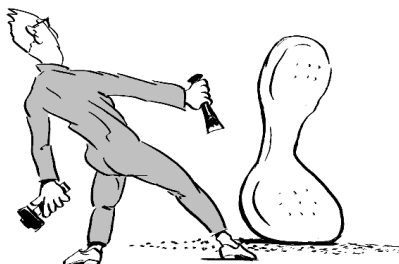 

You can set your handset according to your wishes to distinguish it from the standard settings and to obtain optimum convenience.

## Changing a handset's display language

**MENU**

Open the menu.

**9** WXYZ **2** ABC

First press 9, then 2 and then:

**0+** **1** a.d

for German,

**or 0+** **2** ABC

for English (factory setting),

**or 0+** **3** DEF

for French,

**or 0+** **4** GHI

for Italian,

**or 0+** **5** JKL

for Spanish,

**or 0+** **6** MNO

for Portuguese,

**or 0+** **7** PQRS

for Dutch,

**or 0+** **8** TUV

for Danish,

**or 0+** **9** WXYZ

for Norwegian,

**or 1** a.d **0+**

for Swedish,

**or 1** a.d **1** a.d

for Finnish,

**or 1** a.d **2** ABC

for Czech,

**or 1** a.d **3** DEF

for Polish,

**or 1** a.d **4** GHI

for Turkish.

Press keys:

MENU  
 ↓ AUDIO SET OK  
 H/SET VOL OK  
 ↓ OK

MENU  
 ↓ AUDIO SET OK  
 ↓ RINGER OK  
 ↓ OK

MENU  
 ↓ AUDIO SET OK  
 ↓ MELODY OK  
 ↓ OK

## Modifying the volume and changing the melody

### Handset volume

You can choose from three levels of volume for the handsets – **even during an external call**.

Open the menu.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

### Ringer volume ("ring tone")

You can choose from seven options:

- Five ringer volumes (1–5),
- "crescendo" ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

### Ringer melody

You can choose from ten ringer melodies (1–10).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current melody and its number is displayed. Set the required melody and confirm.

Press keys:

MENU

9 WXYZ 4 GHI 1 DEF

or

9 WXYZ 4 GHI 0+

MENU

9 WXYZ 1 DEF 1 DEF

or

9 WXYZ 1 DEF 0+



MENU

9 WXYZ 3 DEF

RESET ? OK

## Activating/deactivating battery low beep

When this function is activated, you are acoustically informed that the battery is almost empty (factory setting).

Open the menu.

Activate the function.

Deactivate the function.

## Activating/ deactivating Auto talk

When this function is activated, you can remove the handset from the charging unit without pressing the handset key (📞) to accept a call ( factory setting).

Open the menu.

Activate the function.

Deactivate the function.

## Resetting a handset to the factory setting

The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected.

Open the menu.

First press 9 and then 3 to activate the procedure.

Confirm prompt.

Function	Factory setting
Handset volume (see page 53)	1
Ringer volume ("ring tone," see page 53)	5
Ringer melody (see page 53)	1
Auto talk (see page 54)	on
Battery low beep (see page 54)	on
Display language (see page 36)	local
Alarm clock (see page 11)	off

Press keys:



## Base station settings

All base station settings are conveniently made via the handset!

### Changing the system PIN

To prevent unauthorised registration of a handset, you should change the preset system PIN (factory setting: 0000) to a PIN that only you know. This also enables remote operation (answering machine).

MENU



BASE SET

OK

Open the menu.

Select the menu item and confirm.



SYSTEM PIN

OK

Select the menu item and confirm.



Enter the currently valid system PIN (4 digits; factory setting: 0000).

For security reasons only four asterisks (\*\*\*\*) are displayed.

OK

Confirm. &lt;NEW PIN&gt; is displayed:



Enter the new system PIN (4 digits).

OK

Confirm. &lt;REP PIN&gt; is displayed:



Repeat the new system PIN.

OK

Confirm.



Press keys:

## Modifying volume and melody

### Loudspeaker volume

You can adjust the volume of the loudspeaker. There are five levels to choose from (1–5) (“listening in” see page 16).

MENU



BASE SET

OK

AUDIO SET UP

OK

SPEAKER VOL

OK



OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

The level is displayed. Select the required level and confirm.

### Ringer volume (“ring tone”)

You can choose from seven options:

- Five ringer volumes (1–5),
- “crescendo” ring (increasing volume; 6),
- No ringer (ringer off; 0).

MENU



BASE SET

OK

AUDIO SET UP

OK



RINGER VOL

OK



OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required level and confirm.

OFF

Incoming calls are not signalled at the base station but only on the handset.

CRESCENDO

Increasing volume.

Press keys:

		MENU
↓	BASE SET	OK
	AUDIO SET UP	OK
↓	MELODY	OK
	↓	OK

## Ringer melody

You can choose from ten ringer melodies (1–10).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current melody and its number is displayed. Select the required melody and confirm.

## Repeater support

With the Gigaset repeater you can extend the range from your base station to the handset and increase the areas in which reception is possible.

If you want to use a repeater, you must activate this function.

		MENU
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	REPEATER	OK
	SURE?	OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm prompt.

Press keys:



MENU

↓ BASE SET OK

↓ BASE RESET OK

OK

RESET ? OK

## Resetting the base station to the factory setting

Resetting the base station does not affect the system PIN or handset registration.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the system PIN (factory setting: 0000) and confirm.

Confirm prompt.:

Function	Factory setting
Ringer volume (see page 56)	3
Ringer melody (see page 57)	1
Loudspeaker volume (see page 56)	2
Joining a call (barging in) (see page 50)	off
The handset's name (see page 46)	INT 1 to INT 6
Pause after R (see page 60)	UK: 1600 ms Ireland: 800 ms
Pause after line seizure (see page 60)	3 s
Dialling mode (see page 59)	DTMF
Flash time (at PABXs, see page 59)	UK: 100 ms Ireland: 120 ms

Answering machine (AM, see page 35)	activated
Announcement (see page 36)	standard announcement
Open-listening (see page 42)	activated
Quality (see page 42)	longplay
Message length (see page 42)	120 s
Number of rings (see page 41)	automatic
The AM language (see page 36)	English

Press keys:

## Connecting the base station to a PABX

### Dialling mode and flash time



#### Step 1: Changing the dialling mode

It is necessary to change the dialling mode only if your PABX does not operate with the preset tone dialling (DTMF - **d**ual-**t**one **m**ultifrequency). **Please refer to the operating instructions of your PABX.**

Options:

- Tone dialling (DTMF),
- **D**ial **p**ulsing (DP). (country-specific)
- DTMF-Earth\*

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select the required dialling mode and confirm.

MENU		
↓	BASE SET	OK
↓	ADD FEATURES	OK
	DIAL MODE	OK
↓		OK



#### Step 2: Setting the flash time:

##### Prerequisite:

Your PABX requires a flash time different to the preset flash time, **Please refer to the operating instructions of your PABX.**

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the flash time and confirm.

80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms.

MENU		
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	TBR	OK
↓		OK



The current setting is marked with ✓.

\* country-specific

Press keys:

MENU  
↓ TEMP TONE OK

### Switching temporarily to tone dialling

If your PABX still operates with dial pulsing (DP) but tone dialling (DTMF) is required (e.g. to check the mailbox), you must switch to tone dialling (DTMF) during the call.


**Prerequisite:** You are conducting a call!

Open the menu.

Select the menu item and confirm.  
Tone dialling is active.

### Setting pauses

#### Pause after line seizure

With this function you can set the length of the pause inserted automatically after pressing the talk key  before transmitting the telephone number.

Open the menu.

Initiate the setting.


Enter the pause length and confirm.

1 second = **1**; 3 seconds = **2**; 7 seconds = **3**;

2.5 seconds = **4**.

The setting is saved.

#### Pause after recall key

With this function, you can set the length of the pause that is inserted after holding down the  - key.

 




Open the menu.


 



Initiate the setting.

Enter the pause length and confirm.

**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms

The setting is saved.

MENU  
     
p. ex.  OK

MENU  
     
p. ex.  OK

# Appendix

## Maintenance

Simply wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge!

## Contact with liquid



If the handset should come into contact with liquid,  
**on no account switch the device on.**  
**Remove all batteries immediately.**

Allow the liquid to drip out of the device, and then dab all parts of the device dry.

Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

## Questions and answers

If any questions occur to you while you are using your device, we are available 24 hours a day at **[www.my-siemens.com/customercare](http://www.my-siemens.com/customercare)**. You will find the most frequently asked questions and answers below.

Question	Possible cause	Possible solution
No display.	Handset not activated Batteries empty	<b>Hold down</b> the end call key  <b>for 1 second</b> Charge or replace the batteries (see page 9).
No reaction to keystroke.	Keypad protection activated	<b>Hold down</b> the  key <b>for 1 second</b>
No radio connection to the base station – all displays flashing.	Handset outside the base station range.  Handset not registered  Base station not activated	Move closer to the base station.  Register the handset (see page 43).  Check the connector at the base station (see page 8).
Handset that is in the base station is not charging.	Line seized by a second handset for a long period.	Maximum charging power is only possible while <b>nobody</b> is making calls.

Question	Possible cause	Possible solution
Handset/base station does not ring.	Ringer off	Activate the ringer (see page 53/page 56).
Your caller on the telephone cannot hear you.	The <b>[INT]</b> key was pressed – the microphone is “muted.”	Press <b>[GO BACK]</b> <b>[OK]</b> to re-activate the microphone.
The incoming call number is not displayed although CLIP is set.	The telephone number transmission is blocked.	Callers must permit the transmission of their telephone numbers at their network providers.
The ringer/dialling tone cannot be heard.	You have changed the telephone cord on your Gigaset.	Ensure, when purchasing a new cord, that it has the correct pin assignment (see page 8).
Error beep is generated (descending tone sequence)	Wrong input	Repeat the procedure; note the display and, if necessary, refer to the operating instructions.
The answering machine announces “PIN is incorrect” during remote operation.	The system PIN entered is incorrect.	Re-enter the system PIN (see page 55).
The answering machine does not record any messages, announcements or infotexts	Memory is full	Delete old messages Play back and delete new messages (see page 38).
An answering machine message does not have a time stamp	The date/time not set	Set the date/time (see page 11).

## Guarantee

### Scope

- This equipment guarantee applies to end users ("customers"). This guarantee does not in any way affect the customer's statutory rights.
- The guarantee applies to the supplied devices and all their components but not to their installation or configuration or to the services provided by the dealer. Manuals and any software supplied on a separate data medium are excluded from the guarantee. This guarantee does not apply to decorative covers or any other personalised parts or software not included in the scope of supply. The guarantee also does not apply to decorative top or bottom shells for special editions.
- The guarantee provides for devices or components that, despite proper care and use, have demonstrably developed defects due to faulty workmanship and/or faulty materials to be replaced or repaired at our discretion free of charge. The guarantee does not cover normal wear and tear. Alternatively, we reserve the right to replace the defective device with a successor model or reimburse the original purchase price on return of the defective device. Our decision is final. Any legal claims are excluded.
- Claims under the guarantee cannot be made if
  - the defect or damage was caused by improper care or use. Improper care or use includes the following:
  - Opening the device (this is classed as third-party intervention)
  - Manipulating components on the printed circuit board
  - Manipulating the software
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g. microwave, sauna, etc.).
  - Repairs or other work done by persons not authorised by us.
  - Devices fitted with accessories not authorised by Siemens.
- Any further claims due to damage are excluded, such as damage arising outside the device, provided this was not due to gross negligence and/or intent on our part.
- Claims under the guarantee must be made as soon as the defect is noticed.



- A till receipt showing the date of purchase must be presented as proof. Each claim under the guarantee is accepted with the express reservation that subsequent investigations confirm the validity of the claim.
- Any devices or components that are replaced become our property.
- The costs of materials and labour will be borne by us, but not the costs of transport, postage or freight.
- We are entitled, at our discretion, to make technical changes (such as firmware updates) beyond repair or replacement in order to upgrade the device to the latest state of the art. There is no additional charge to the customer for this work. Our decision is final. Any legal claims are excluded.
- The guarantee is valid in the country of purchase. It applies only if the device is operated in the relevant geographical area in accordance with the information on the packaging and in the operating instructions.
- Any further claims are excluded. Siemens is not liable in any circumstances for downtime, loss of profits, loss of data or loss of any other information. The customer alone is responsible for safeguarding such data and information.
- Changes to this guarantee require prior approval by Siemens in writing.

### Guarantee period

- The guarantee applies in countries in the EU from 1 January 2002 for a period of 24 months.
- In all other countries the guarantee period shall be the relevant minimum statutory guarantee period, but no longer than 24 months.
- The guarantee period starts on the day of purchase by the customer.
- A successful claim under the guarantee does not extend the guarantee period.
- Work under the guarantee is handled by our Customer Care Centers.

The guarantor is Siemens Aktiengesellschaft Deutschland, Schlavenhorst 88, D-46395 Bocholt.



To redeem the guarantee please contact your local Customer Care Center (see page 65).

---

## Customer Care

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

**[www.my-siemens.com/customer care](http://www.my-siemens.com/customer care)**

or by referring to the section entitled **Questions and answers** in this manual (page 61).

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi.....	0 26 42 38 00	Mauritius.....	2 11 62 13
Australia.....	18 00 62 24 14	Morocco .....	22 66 92 32
Argentina.....	0 80 08 88 98 78	Netherlands .....	0 90 03 33 31 02
Austria.....	05 17 07 50 04	Norway .....	22 70 84 00
Bahrain .....	40 42 34	Oman .....	79 10 12
Bangladesh.....	0 17 52 74 47	Pakistan .....	02 15 67 35 65
Belgium .....	0 78 15 22 21	Philippines ..	28 14 98 88
Brunei .....	02 43 08 01	Poland .....	08 01 30 00 30
Bulgaria.....	02 73 94 88	Portugal .....	8 00 85 32 04
Cambodia .....	12 80 05 00	Qatar.....	00 97 44 69 67 00
Canada.....	1 88 87 77 02 11	Russia .....	09 57 37 29 51
China .....	0 21 50 31 81 49	Saudi Arabia .....	0 26 51 50 94
Croatia .....	0 16 10 53 81	Sharjah.....	0 65 33 66 42
Czech Republic .....	02 33 03 27 27	Singapore.....	8 45 48 18
Denmark.....	35 25 86 00	Slovak Republic .....	07 59 68 22 66
Dubai .....	0 43 55 99 88	Slovenia .....	0 14 74 63 36
Egypt .....	0 13 31 31 44	South Africa .....	08 60 10 11 57
Estonia.....	6 30 47 35	Spain .....	9 02 11 50 61
Finland.....	09 22 94 37 00	Sweden .....	0 87 50 99 11
France .....	01 56 38 42 00	Switzerland .....	0 12 12 00 90
Germany.....	0 18 05 33 32 22	Taiwan .....	02 25 18 65 04
Greece.....	0 16 86 43 89	Thailand .....	0 27 15 51 00
Hong Kong.....	22 58 36 36	Tunisia .....	01 86 19 02
Hungary.....	06 14 71 24 44	Turkey.....	(0216) 579 71 00
Iceland.....	5 11 30 00	United Kingdom .....	0 87 05 33 44 11
India.....	01 16 92 39 88	USA .....	1 800 777 0211
Indonesia.....	02 14 61 50 81	Vietnam .....	45 63 22 44
Ireland.....	18 50 77 72 77	Zimbabwe.....	04 36 94 24
Italy.....	02 66 76 44 00		
Ivory Coast .....	80 00 03 33		
Jordan .....	0 79 55 96 63		
Kuwait .....	4 81 87 49		
Latvia .....	7 50 11 14		
Lebanon.....	01 44 30 43		
Libya.....	02 13 35 02 31		
Lithuania.....	2 39 77 79		
Luxembourg .....	43 84 33 99		
Malaysia .....	03 79 52 51 84		
Malta .....	00 35 32 14 94 06 32		

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station. Country-specific features have been taken into account.

The conformity of the device with the essential requirements of the R&TTE directive is confirmed by the CE symbol.

### Excerpt from the original declaration

„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M“ in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured.“

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. If necessary, a copy of the original DoC can be made available via the company hotline.

**CE 0682**

## Technical data

### Recommended batteries

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Saft RH 6 NiMH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	Panasonic HHR-110 AA (1100 mAh)
Panasonic 600 DT (600 mAh)	Panasonic Pro+ 1500 (1500 mAh)
Emmerich 700 (700 mAh)	Sanyo HR-3U (1600 mAh)
	GP GP130 AAHC (1300 mAh)
	Varta Phone Power (1300 mAh)
	Emmerich 1300 (1300 mAh)

### The handset's operating times/charging time

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 200 (8 days)	more than 10	approx. 5.5
1200	up to 320 (13 days)	more than 17	approx. 9
1600	up to 550 (23 days)	more than 24	approx. 12



We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the charging status icon!

The battery charge capacity decreases after a few years for technical reasons.

### Power consumption

- On standby (not during charging): approx. 2.3 watts.
- On standby (during charging): approx. 5.2 watts.
- During a call (not during charging): approx. 2.5 watts.

Feature	Value
DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880 – 1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	Base station 220/230 V ~/ 50 Hz (power supply unit SNG X-a)
Environmental conditions for operation	+5 °C to +45 °C 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)/ DTMF-Earth*
Flash time	UK: 100 ms Ireland: 120 ms
Dimensions Base station	136.6 x 149 x 64.2 mm (L x W x H)
Dimensions Handset	155.5 x 53.6 x 36.2 mm (L x W x H)
Weight	Base station 215 g Handset with batteries < 160 g
Length of the cords	Telephone connecting cord approx. 3 m Mains cable approx. 3 m
Maximum recording time	Approx. 15 minutes

\* country specific

# Menu table

It is faster to select a menu function by pressing **MENU** than selecting the digit combinations by scrolling, e.g. **5**<sub>M</sub> **2**<sub>ABC</sub> **2**<sub>ABC</sub> = **5-2-2** to set the time.

## Main menu



**MENU** when the telephone **is idle**, press:

<b>1</b>	SEL SERVICES	<b>1-1</b>	WITHHOLD NO	
		<b>1-2</b>	CALL WAITING	
		<b>1-3</b>	RINGBACK OFF	
		<b>1-4</b>	CALL DIVERT	
<b>2</b>	ALARM CLOCK	Enter alarm call		
<b>3</b>	AUDIO SET	<b>3-1</b>	H/SET VOL	set
		<b>3-2</b>	RINGER	set
		<b>3-3</b>	MELODY	set
<b>5</b>	BASE SET	<b>5-1</b>	AUDIO SET UP	
		<b>5-1-1</b>	SPEAKER VOL	set (G4015 only)
		<b>5-1-2</b>	RINGER VOL	set
		<b>5-1-3</b>	MELODY	set
		<b>5-2</b>	DATE/TIME	
		<b>5-2-1</b>	DATE SET	
		<b>5-2-2</b>	CLOCK SET	
		<b>5-2-3</b>	CLOCK MODE	<b>5-2-3-1</b> 24 H
				<b>5-2-3-2</b> 12 H
		<b>5-3</b>	SYSTEM PIN	enter
		<b>5-4</b>	BASE RESET	factory setting
		<b>5-5</b>	ADD FEATURES	
		<b>5-5-1</b>	DIAL MODE	<b>5-5-1-1</b> TONE
				<b>5-5-1-2</b> PULSE
				<b>5-5-1-3</b> DTMF-EARTH (country-specific)
		<b>5-5-2</b>	TBR	<b>5-5-2-1</b> 80 MS
				<b>Until</b>
				<b>5-5-2-7</b> 600 MS
		<b>5-5-3</b>	REPEATER	on/off
		<b>5-5-6</b>	BARGE IN	on/off
		<b>5-6</b>	PRESELECT	
		<b>5-6-1</b>	PRESELECT NO	Prefix/network provider
		<b>5-6-2</b>	WITH PRESEL	List
		<b>5-6-3</b>	W/O PRESEL	List

## Menu table

6	VOICE MAIL	6-1	SET KEY 1	6-1-1	MAILBOX		
				6-1-2	ANS MACHINE		
		6-2	ANS MACHINE	on/off			
		6-3	SPKR ON/OFF	on/off			
		6-5	ANNOUNCEMENT	6-5-1	REC ANC		
				6-5-2	PLAY ANC		
				6-5-3	DEL ANC		
		6-6	MESSAGE SET	6-6-1	MSG LENGTH		
				6-6-2	QUALITY	6-6-2-1	LONG PLAY
						6-6-2-2	HIGHQUALITY
		6-7	CALL SCREEN				
		6-8	RING DELAY				
7	REGISTER HS						


## Directory/network access list

Press  /  to open the corresponding list.

The following **MENU** functions are now available:

<b>1</b>	EDIT ENTRY	Add number
<b>2</b>	NEW ENTRY	Save new telephone number
<b>3</b>	SHOW ENTRY	Display/change telephone number
<b>4</b>	DELETE	Delete entry

## Messages

Press  to open the list with the messages.

The following **MENU** functions are now available:

<b>1</b>	ANS M	(if available)		
<b>2</b>	MAILBOX			
<b>3</b>	CALLS			
		<b>3-1</b>	DELETE	Delete entry
		<b>3-2</b>	COPY TO DIR	Copy no. to the directory
		<b>3-3</b>	TIME	Display date/time
		<b>3-4</b>	STATUS	Indicate new/old
		<b>3-5</b>	LIST MODE	
		<b>3-6</b>	DELETE LIST	
		<b>3-6-1</b>	MISSED	
		<b>3-6-2</b>	ALL	



## Quick reference guide

### Handset

Activate/deactivate the handset

hold down 

Activate/deactivate the keypad protection

hold down 

Activate/deactivate tones

hold down 



 
Make an external call







Redial a number

 If applicable,  select an entry 




 


Copy keyed telephone number to the directory



 

 



Dial with the directory

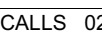   [Name] and/or  







Dial with the caller list

   02/06  if necessary  

Set the handset volume

 


Make an internal call

 e. g.  or    

 



 
Call all handsets

  or   

Transfer call to another handset

 e. g.  




 


 

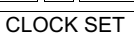
 
 
Internal enquiry calls

 e. g. ; End:   

Set the date

        
  Date entered 

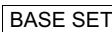Set the time





        
   Time entered 

Set the alarm clock



    Enter the alarm call 

### Answering machine

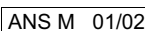 



Play back messages

   01/02 

 

To the next message

 or 

To the next message but one

  or  




 

 
Repeat the message

 or 

To the previous message

  or   


Deleting all old messages

Deleting individual messages



## Accessories

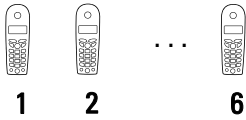 

Upgrade your Gigaset to a cordless PABX:

- Everyone has their own handset
- Toll-free internal communication
- Transferring external calls to the right person etc.

### Gigaset 4000 Classic handset

The Gigaset 4000 Classic offers you the following features:



- 12-digit display to show the time, telephone numbers etc.
- Directory with 20 entries
- Alarm clock
- Automatic redialling of the last 5 numbers

The package includes: Handset with charging unit

Colour: midnight blue or glacier green

### Gigaset 4000 Comfort handset

The Gigaset 4000 Comfort offers you enhanced options.



- 5 line illuminated graphic display
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/ names
- Room monitoring
- Reminder function
- Full ISDN functionality in connection with an ISDN base station.

The package includes: Handset with charging unit.

Colour: midnight blue or glacier green\*.

\* Depending on the country



### Gigaset repeater

With the Gigaset repeater you can extend your Gigaset's range and open up areas in which reception was not possible.

All functions of the handset can be used in the extended transmission area **(not available in all countries!)**.



### Gigaset 4000 Micro handset

- Illuminated keypad
- Vibration alarm
- Connector jack for headset and MP3 player
- 5-line illuminated graphic display
- SMS
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/ names
- Room monitoring
- Appointment alarm

The package includes: Handset with charging unit

Colour: midnight blue \*

All **devices**, **accessories** and **batteries** are available in **specialised shops** or via the **Siemens Service Shop** on the Internet:

**<https://communication-market.siemens.de/serviceshop/default.asp>.**

\* Depending on the country

# Index

## A

- Accessories **73**
- Activating
  - handset **10**
  - keypad protection **10**
- Alarm call **13**
- Alarm clock **12**
  - activating **12**
  - deactivating **13**
- Announcement
  - Remaining memory **36**
- Announcement (own, AM)
  - recording **36**
- Answering machine (AM)
  - activating/deactivating **35**
  - individual settings **41**
  - listening to announcements **37**
  - picking up a call **38**
- Auto talk
  - activating/deactivating **54**
- Automatic preselection **32**
- Automatic redial **18**

## B

- Barging in (joining a call) **50**
- Base station
  - connecting **8**
  - connecting to a PABX **59**
  - installing **7**
  - resetting to the factory setting **58**
  - setting pauses **60**
  - setting the ringer volume **56**
- Batteries
  - inserting **9**
  - loading **9**
  - recommended **67**
- Battery low beep **54**
- Belt clip **10**
- Brief overview **1**

## C

- Call
  - connecting **48**
  - ending **14**
  - waiting **49**
- Call charges
  - setting **34**
- Call divert **27**
- Callback a caller **23**
- Callback when busy **29**
- Call-by-Call **30**
- Caller list **23**
- Changing
  - the display language **52**
  - the system PIN **55**
- Character map **20**
- Charge saving function **41**
- Charges see call charges **34**
- Charging status icon **9**
- CLIP
  - caller list **23**
  - displaying numbers **15**
- CLIR **26**
- Collective call (making internal calls) **47**
- Conference **28**
- Confirmation beep **10**
- Connecting a call **48**
- Customer Care **65**

## D

- Date setting **11**
- Deactivating
  - battery low beep **54**
  - handset **10**
  - keypad protection **10**
  - ringer **51**
- Delivery package **7**
- De-registering handsets **45**
- Dialling modes **32, 44, 45, 59**
- Dialling with automatic preselection **34**

### Directory **19**

deleting a single entry **22**

deleting all entries **22**

dialling a number **21**

storing an entry **19**

### Display keys **1**

Displaying telephone numbers (CLIP) **15**

Diversion see call divert **27**

DP (Dial pulsing) **59**

DTMF (dual-tone multifrequency) **59**

## E

Enquiry call (internal) **49**

Error beep **10**

## F

Factory setting

base station **58**

handset **54**

Flash time **59**

## G

GAP standard **45**

Guarantee **63**

## H

Handset

activating/deactivating **10**

all handsets ring ("Paging") **51**

automatic registration **43**

de-registering **45**

name of a handset **46**

operating **9**

operating times/charging time **67**

power consumption **67**

registration **43**

resetting to the factory setting **54**

volume **53**

## I

Internal dialling **14**

Internal enquiry calls **49**

Internal number **47**

## K

Keypad protection **10**

Keys **1**

## L

Listening in

at the base station ("speaker on/off") **16**

on the answering machine **42**

Listening to announcements **37**

Loudspeaker volume **56**

## M

Mailbox **17**

features **26**

Maintenance **61**

Making an external call **14**

Making calls

answering a call **15**

external call **14**

internal dialling **14, 47**

Medical equipment **6**

Muting the microphone **16**

## N

Name of a handset **46**

Network access list **21, 30**

deleting a single entry **22**

Network access list (call-by-call)

displaying and changing an entry **21, 22**

entering a name **21**

storing an entry **19**

Network provider **30, 31**

Notebook function **24**

Number of rings **41**

## O

Operating times of the handset **67**

Operation see preparing the telephone **7**

## P

PABX **59**

switching to tone dialling **60**

Paging **51**

Pause **14**

Picking up a call **16**  
Power consumption **67**  
Power supply unit **6**  
Preparing the telephone **7**  
Preselection **32**  
    automatic **32**  
    list with preselection **32**  
    list without preselection **32**  
Protective plastic film **9**

## Q

Questions and answers **61**

## R

Range **7**  
Recording quality **42**  
Redialling list **18**  
Registering handsets **43**  
Remaining memory **36**  
Remote operation **39**  
Repeater **57**  
Ring tone  
    base station setting **56**  
    handset setting **53**  
Ringback **29**

Ringer melody  
    base station **57**  
    handset **53**  
Ringer volume  
    base station **56**  
    handset **53**  
Rings see number of rings **41**

## S

Safety precautions **6**  
Setting the language  
    display **52**  
Settings **52**  
    answering machine **41**  
    display language **52**  
Speed dialling **31, 39**  
Standard announcement **36**  
Symbols **2**

## T

Technical Data **67**  
Telephone number **19**  
    copying to the directory **24**  
    redialling list **18**  
    suppressing for the next call **26**  
Time setting **11**  
Toggling **28**  
Tone dialling **60**

# Answering machine remote operation

The functions of the keys for operating the answering machine remotely are the same for all telephones, handsets and tone transmitters. The "credit card" shows you how to perform remote operations on an external telephone (e.g. from a pay phone, from a hotel etc.) and the meaning of the keys.

## SIEMENS Gigaset 4015

### Initiating remote operation:



Dial your own telephone number. You will hear your answering machine.



Press the key and enter the system PIN.  
Use digit keys to control the answering machine.

### Activating the answering machine:

Let the telephone ring for approx. one minute.



Enter the system PIN.  
The answering machine is activated.

## SIEMENS Gigaset 4015

Back      Pause/  
Continue      Next

1

2

3

4

5

6

7

8

9

Delete

 
\*

0


#

# Operating the telephone


1

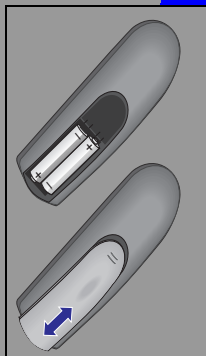

3

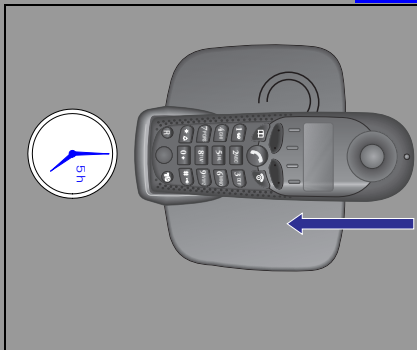 

2

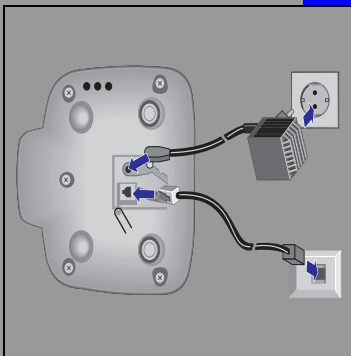 

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 München

© Siemens AG 2002  
All rights reserved. Subject to availability.  
Right of modification reserved.  
Printed in Germany (04/2002).

Siemens AG  
<http://www.my-siemens.com>

Reference No.: A31008-G4015-B101-3-7619



A31008- G4015- B101- 3- 7619